


NIKKOR

NIKKOR Z 24-70mm f/2.8 S

**En User's Manual**  
**Fr Manuel d'utilisation**  
**Es Manual del usuario**

Printed in Japan  
SBP901(30)  
7MMA2030-01

NIKKOR CORPORATION

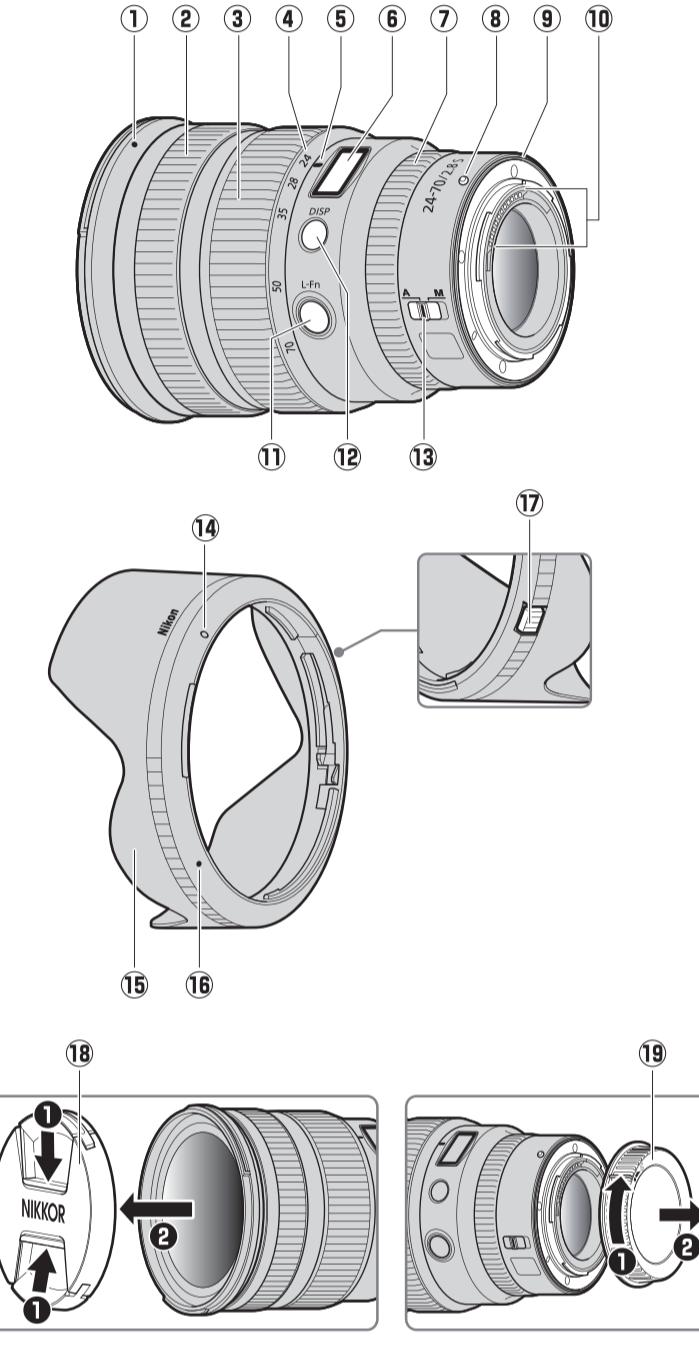**Parts of the Lens: Names and Functions**

① Lens hood mounting mark	Use when attaching the lens hood.	See ②
② Focus ring	Use for manual focus. When focusing using autofocus, you can adjust focus manually by rotating the focus ring while the shutter-release button is pressed halfway; after focusing, press the shutter-release button the rest of the way down to shoot.	—
③ Zoom ring	Rotate to zoom in or out.	—
④ Focal length scale	Determine the approximate focal length when zooming the lens in or out.	—
⑤ Focal length mark	—	—
⑥ Lens info panel	View focus distance, depth of field, and other information.	See ③
⑦ Control ring	Rotate to adjust a setting such as <b>Aperture</b> or <b>Exposure compensation</b> assigned using the camera. For more information, see the description of <b>Custom control assignment</b> in the camera manual.	—
⑧ Lens mounting mark	Use when mounting the lens on the camera.	See ④
⑨ Rubber lens-mount gasket	—	—
⑩ CPU contacts	Used to transfer data to and from the camera.	—
⑪ L-Fn button	Press to perform a function assigned using the camera. For more information, see the description of <b>Custom control assignment</b> in the camera manual.	—
⑫ Display button	Save settings or choose the information shown in the lens info panel.	See ③
⑬ Focus-mode switch	Choose <b>A</b> for autofocus, <b>M</b> for manual focus. Note that regardless of the setting chosen, focus must be adjusted manually when manual focus mode is selected using camera controls.	—
⑭ Lens hood lock mark	Use when attaching the lens hood.	—
⑮ Lens hood	Lens hoods block stray light that would otherwise cause flare or ghosting. They also serve to protect the lens.	—
⑯ Lens hood alignment mark	Use when attaching the lens hood.	See ②
⑰ Hood release	Use when removing the lens hood.	—
⑱ Front lens cap	—	—
⑲ Rear lens cap	—	—

**En User's Manual**

Before using this product, please read these instructions carefully. You will also need to consult the camera manual.

• This lens is intended exclusively for use with mirrorless cameras featuring a Nikon Z mount.

**For Your Safety**

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

Keep these safety instructions where all those who use this product will read them.

**⚠ WARNING:** Failure to observe the precautions marked with this icon could result in death or severe injury.

**⚠ CAUTION:** Failure to observe the precautions marked with this icon could result in injury or property damage.

**⚠ WARNING**

• Do not disassemble or modify this product.

• Do not touch internal parts that become exposed as the result of a fall or other accident.

Failure to observe these precautions could result in electric shock or other injury.

• Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the camera power source.

Continued operation could result in fire, burns or other injury.

• Keep dry.

• Do not handle with wet hands.

Failure to observe these precautions could result in fire or electric shock.

• Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

• Do not directly view the sun or other bright light source through the lens or camera.

Failure to observe this precaution could result in visual impairment.

• Keep this product out of reach of children.

Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.

• Do not handle with bare hands in locations exposed to extremely high or low temperatures.

Failure to observe this precaution could result in burns or frostbite.

**⚠ CAUTION**

• Do not leave the lens pointed at the sun or other strong light sources.

Light focused by the lens is a source of fire and damage to the product's internal parts.

• Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.

Failure to observe this precaution could result in fire or product malfunction.

• Do not transport cameras or lenses with tripods or similar accessories attached.

Failure to observe this precaution could result in injury or product malfunction.

**Notices for Customers in the U.S.A.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Federal Communications Commission (FCC) Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy if not installed and used in accordance with the instructions. It may cause harmful interference in such installations. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**CAUTIONS**

**Modifications:** The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A.  
Tel: 631-547-4200

**Notice for Customers in Canada**

CAN ICES-3-B / NMB-3-B

**Using the Lens**

Refer to the diagram on the left edge of this sheet.

**A Attachment and Removal****Attaching the Lens**

① Turn the camera off, remove the body cap, and detach the rear lens cap.

② Position the lens on the camera body, keeping the mounting mark on the lens aligned with the mounting mark on the camera body, and then rotate the lens counterclockwise until it clicks into place.


**Removing the Lens**

① Turn the camera off.


② Press and hold the lens release button while turning the lens clockwise.

**The Lens Info Panel**

The lens info panel lights when the lens is attached to a camera and the camera is on.

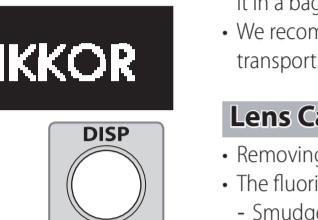

Press the display button to cycle the display as shown:

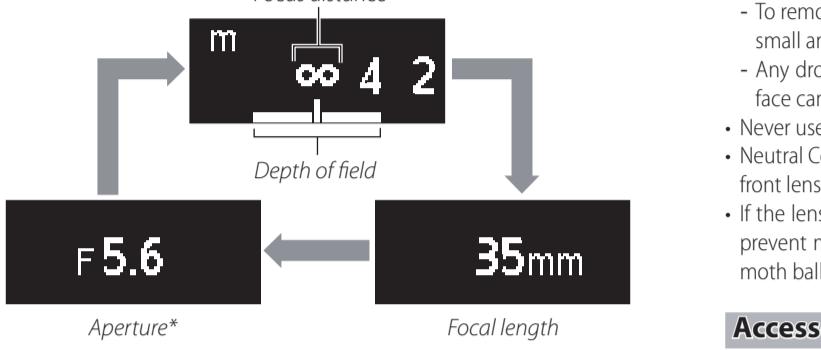

\* Aperture is displayed only when the camera is in mode A or M. The display for other modes is shown in the illustration.

② The focus mode (AF or MF) is briefly displayed when chosen using the focus-mode switch.



③ The focus distance, depth of field, and other information displayed in the lens info panel are approximately the same.


④ The lens info panel The focus distance, depth of field, and other information displayed in the lens info panel are approximately the same.

**Panel Options**

Follow the steps below to choose the units for focus distance from meters (m) or feet (ft) or adjust the brightness of the lens info panel.

① Press and hold the display button to view settings.

- Unit or brightness selection options will be displayed. The currently selected item will flash.
- Press the display button to toggle between displays.

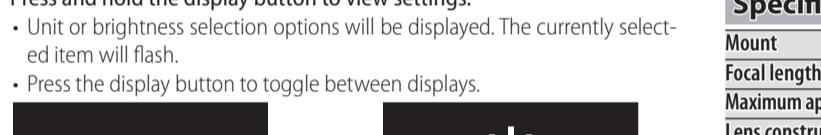

② Choose a setting using the lens control ring.



③ Choose a setting using the lens control ring.



④ Press the display button to save changes and toggle the display.

If no operations are performed using lens controls for about 5 seconds, panel options will clear from the display and changes will be canceled.

⑤ Press and hold the display button to return to the lens information display.

⑥ Choosing for brightness turns the lens info panel off. To turn the display on again, press and hold the display button.

**Attaching and Removing the Lens Hood****Attaching the Lens Hood**

Align the lens hood mounting mark with the lens hood alignment mark (①) and then rotate the hood (②) until the mounting mark is aligned with the lens hood lock mark (③).

Lens hood mounting mark Lens hood lock mark

When attaching or removing the hood, hold it near the lens hood alignment mark (①) and avoid gripping the front of the hood too tightly. The hood can be reversed and mounted on the lens when not in use.

**Removing the Lens Hood**

Keeping the hood release pressed (①), rotate the hood in the direction shown (②) and remove it from the lens (③).

Hood release

The same procedure can be used when the hood is reversed.

**When the Lens Is Attached**

The focus position may change if you turn the camera off and then on again after focusing. Refocus before shooting. If you have focused on a pre-selected location while waiting for your subject to appear, we recommend that you do not turn the camera off until the picture is taken.

**B Precautions for Use**

Avant d'utiliser ce produit, veuillez lire ces instructions attentivement. Vous devrez également consulter le manuel de l'appareil photo.

• Cet objectif est destiné exclusivement aux appareils photo hybrides dotés d'une monture Nikon Z.

**Pour votre sécurité**

Afin d'éviter de provoquer des dommages matériels ou de vous blesser ou de blesser un tiers, lisez intégralement « Pour votre sécurité » avant d'utiliser ce produit.

Conservez ces consignes de sécurité dans un endroit facilement accessible à tous ceux qui pourraient se servir de ce produit.

**AVERTISSEMENT**

• Ne démontez pas ou ne modifiez pas ce produit.

• Ne touchez pas les composants internes qui sont exposés suite à une chute ou à un autre accident.

• Si vous observez des anomalies provenant du produit comme la fumée, de la chaleur ou des odeurs inhabituelles, débranchez immédiatement la source d'alimentation de l'appareil photo.

• Gardez votre matériel au sec.

• Ne manipulez pas avec les mains mouillées.

• Ne laissez pas l'objectif à proximité d'un feu ou dans d'autres endroits extrêmement chauds. La chaleur extrême pourrait endommager ou déformer les pièces extérieures.

• Les changements brusques de température peuvent être à l'origine d'une condensation préjudiciable à l'intérieur et à l'extérieur de l'objectif. Avant de faire passer l'objectif d'un environnement chaud à froid ou vice versa, rangez-le dans un sac ou dans une boîte en plastique pour ralentir le changement de température.

• Nous recommandons de ranger l'objectif dans son étui afin de le protéger des rayons du soleil.

**ENTRETIEN DE L'OBJECTIF**

• Normalement, enlever la poussière suffit pour nettoyer les surfaces en verre de l'objectif.

• Vous pouvez nettoyer les lentilles avant et arrière traitées au fluor comme décrit ci-dessous.

• Les taches, les traces de doigt et autres tâches huileuses peuvent être retirées avec un tissu propre et doux en coton ou un chiffon optique : nettoyez avec un mouvement circulaire à partir du centre vers l'extérieur.

• Pour retirer les taches tenaces, essayez délicatement avec un chiffon doux et légèrement imbibé d'une petite quantité d'eau distillée, d'éthanol ou de nettoyant pour objectif.

• Les marques en forme de goutte peuvent également être retirées avec une surface hydrophobe et oleophobe.

• N'utilisez jamais de solvants organiques comme du diluant à peinture ou du benzène pour nettoyer l'objectif.

• Les filtres neutres (NC, disponibles séparément) et autres accessoires similaires permettent de protéger la lentille avant.

• Si vous n'avez pas l'intention d'utiliser l'objectif pendant une période prolongée, rangez-le dans un étui et fermez-le avec une fermeture éclair.

• Si vous utilisez l'objectif avec un trépied, assurez-vous que l'objectif est bien fixé à l'extrémité du trépied.

• Utilisez toujours l'objectif avec une housse de protection lorsque vous le transportez.

• Maintenez l'objectif à l'abri de la lumière directe du soleil ou avec des boules antimes de naphthaline ou de camphre.

**Ecran d'informations sur l'objectif**

L'écran d'informations sur l'objectif s'allume lorsque vous fixez l'objectif sur un appareil photo et que ce dernier est sous tension.

