

 
TELE-COUPLER R

Canon Tele-Coupler R is used with Canon tele-photo lenses over 200 mm in combination with the Canonflex.


CANON CAMERA CO., INC.

312 Shimo-maruko-cho, Ohta-ku, Tokyo, Japan

Canon TELE-COUPLER R

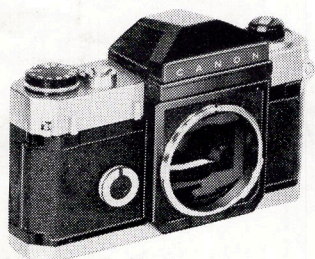


Filter Ring

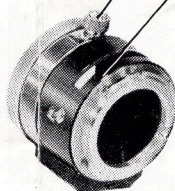 

Tightening Knob for
changing Camera Position

Insert filter ring here

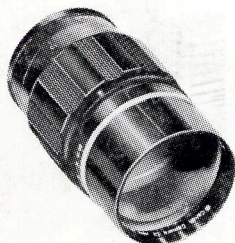

Fitting

Secure one end of the Tele-Coupler to the tele-photo lens, and mount on the bayonet lens-mount of your Canonflex. The bayonet of the Tele-Coupler is as easy to mount on the camera as your standard Canon Lenses of the same lens mount.

Filter Ring

To use filter, remove filter ring from the slot on the Tele-Coupler, and screw the desired 40 mm Canon filter to filter ring and insert filter ring back into the slot of the Tele-Coupler.

Important: When you use a filter, be

sure to focus with the filter in the slot. If you insert the filter after focusing, picture will become out of focus.

Change of Camera Position

To change the camera position to vertical or horizontal, loosen the tightening knob on camera's end of the Tele-Coupler, then turn camera to desired position and tighten the knob.

The lenses used with the Tele-Coupler R do not have pre-set aperture diaphragm; therefore it is necessary to open and close the aperture manually.